
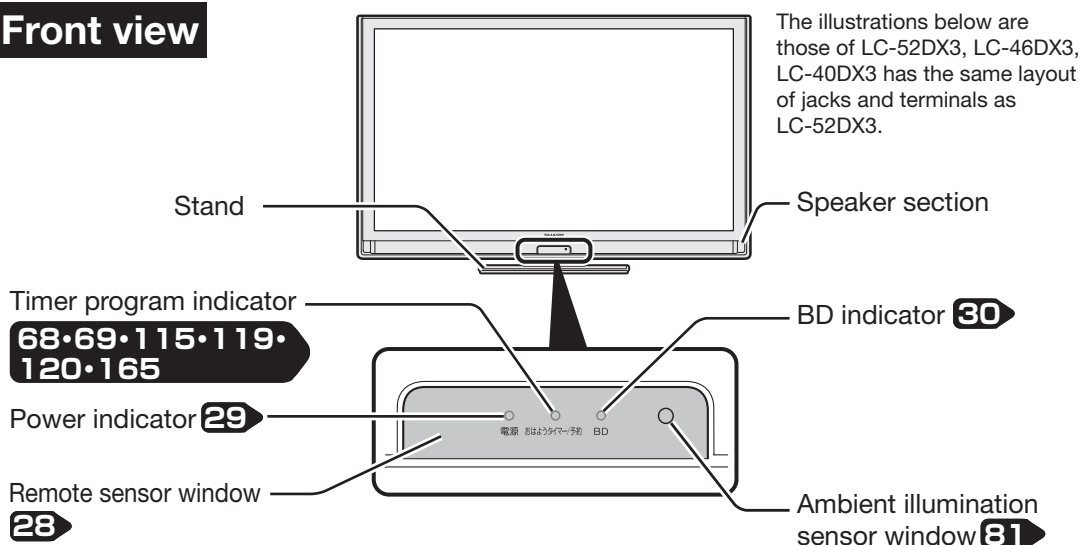


English Guide

Part Names

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.



Front view



Adjusting the LCD panel angle


- The LCD panel can be rotated horizontally up to 15° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

Control panel

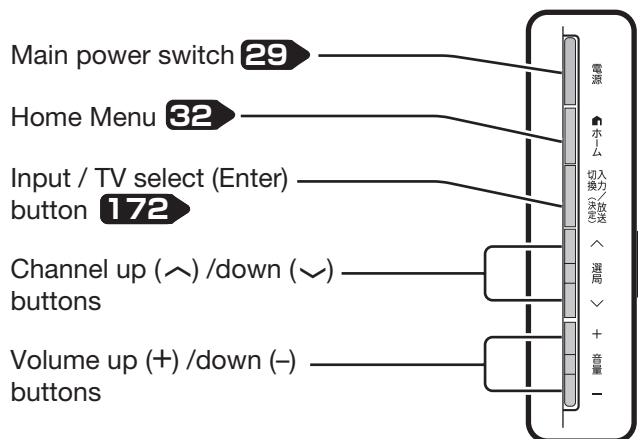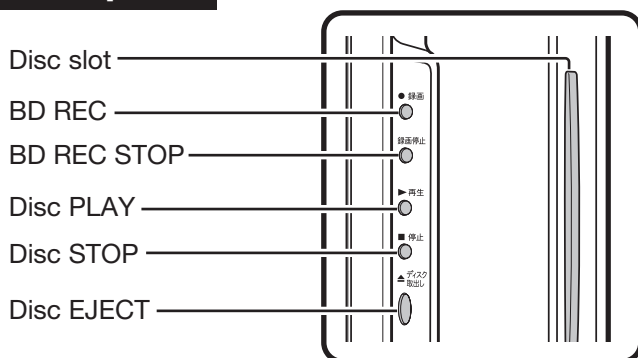

Right side view

Right side view

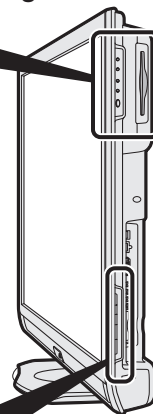

Back view

i.LINK terminal (TS input) for the extension of the function. Used only for the input terminal to connect an external equipment with i.LINK output function. There are no equipments that can be connected to this terminal at present (as of May 2010).

Connect a Blu-ray Disc player, AV amplifier, etc.

AV in 1 and 2 (HDMI)
**170・255・256・
258・259・260・
262**

AV in 4
**255・257・
260・264**

RS-232C
263

LAN jack
(10BASE-T/100BASE-TX)
182・205

AV in 6/Audio out
255・257・260・261

Digital audio output jack
(optical)**259・261**

BS-CS 110 antenna input
terminal **250~253**

PC input (audio)
262・263

AV in 7 (PC)
263

VHF-UHF antenna input
terminal **250~253**

AV in 3 (HDMI)


**170・255・256・
258・259・260・
262**

Connect a video game
equipment, video camera,
etc.

AV in 5 (D5)

255・257・260


Headphones
jack

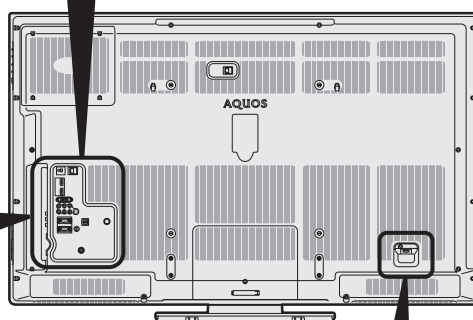

Connect the AC cord

AC cord connector
(AC 100V) **265**

The provided power connector
may have different shape from
that shown in the drawing.

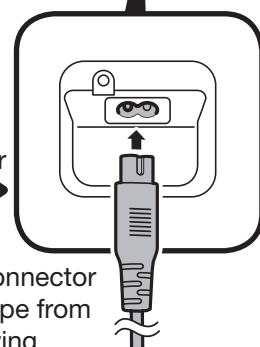

Remote Control Unit

Active/Standby 29

Press to engage the TV set in the active or standby mode.

Channel select 38

- Press to select a channel.
- Use to input a number for various settings.

Terrestrial analog/Terrestrial

Digital/BS/CS 33

Select the CS digital channel for the first time. 274

Linked data broadcast

41・144・211

Mute 38

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

Volume up (+)/down (-) 38

Press to adjust the volume.

EPG 49・114・164

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast. Select a future program in EPG to set a timer program.

Finish

Press to finish menu operation, etc.
* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

List the programs recorded on a BD 130

Display the Top Menu of the disc 133

Display 42・43

Press to display or turn off the channel call, etc.

Play back programs recorded on a disc 130

Fast forward, rewind, etc. during playback 140~141

See Page 38 for how to select a program.

View the Internet or IPTV 195・210

Input select 172

Channel up (^)/down (v) 38

Press to select channels in the current network, media and CATV channels in the ascending or descending order.
* CATV channels are factory set to be skipped.

Display the "Home" Menu 32・33

Press to start some useful operations of the TV.

Cursor (up, down, left, right) 32・33

Enter/Confirm 32・33

Return 32

Color 41・50・51

Use to operate EPGs and data program screens.

Display the Tool Menu 36

REC 110~112

REC STOP 110~112

Buttons under the cover

Hold the cover by the projections () and lift.

AV mode select 75

Audio select 59・60・144

Picture select 60・145

Caption 60・145

Sleep timer 89

Freeze 44

View status of the BD 105

Display the Pop-up Menu (BD) or Disc Menu (DVD) 133

Display the Playback Menu 146

Recommended programs select 56~58

Press to select a program which the TV set recommends.

Media select 38・41

CATV 40

Digital channel number input 40

Display the operation panel of VOD 215・219・231

Eject the disc 31

Familink


160~171

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

Switching the Display Language to English ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。

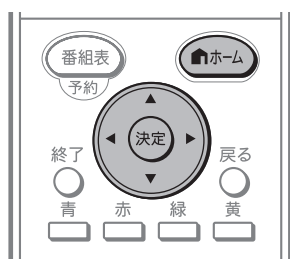

◇おしらせ◇

誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」－「 (View Setting)」－「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

1

Press



and
select
with



Select “設定” (Setup) on the Home menu.

ホームメニューから「設定」を選ぶ



2

Select
with



Select “ (視聴準備)” (View Setting).

「 (視聴準備)」を選ぶ



3


select
with



Press



Select “Language (言語)”.
「Language (言語)」を選ぶ

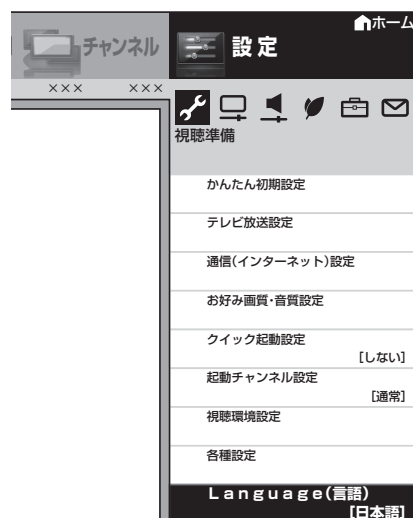

4

select
with



Press



Select “English”.
「English」を選ぶ

Enter.
決定する



5

Press



Finish this operation.
終了する

- The menu screen is now displayed in English.
- 画面表示が英語になります

はじめに
お読みください

テレビを見る／
便利な使いかた

ブルーレイディスク
で録る・見る

ファミリンク

ビデオ・オーディオ・
パソコンをつなぐ

インターネット／
ホームネットワーク

設置・接続・
受信設定

故障かな？／
エラーメッセージ

お役立ち情報
(仕様や索引)

English
Guide